

AiM Infotech

Emerald K3 and K6 ECU – Generic CAN

Release 1.01



ECU




This tutorial explains how to connect Emerald K3/K6 ECU to AiM devices.

1


Software setup

To connect Emerald K3/K6 ECU to AiM devices a software setup is needed. Run Emerald K3/K6 software and follow this path:


- ECU Configuration -> CAN datalink

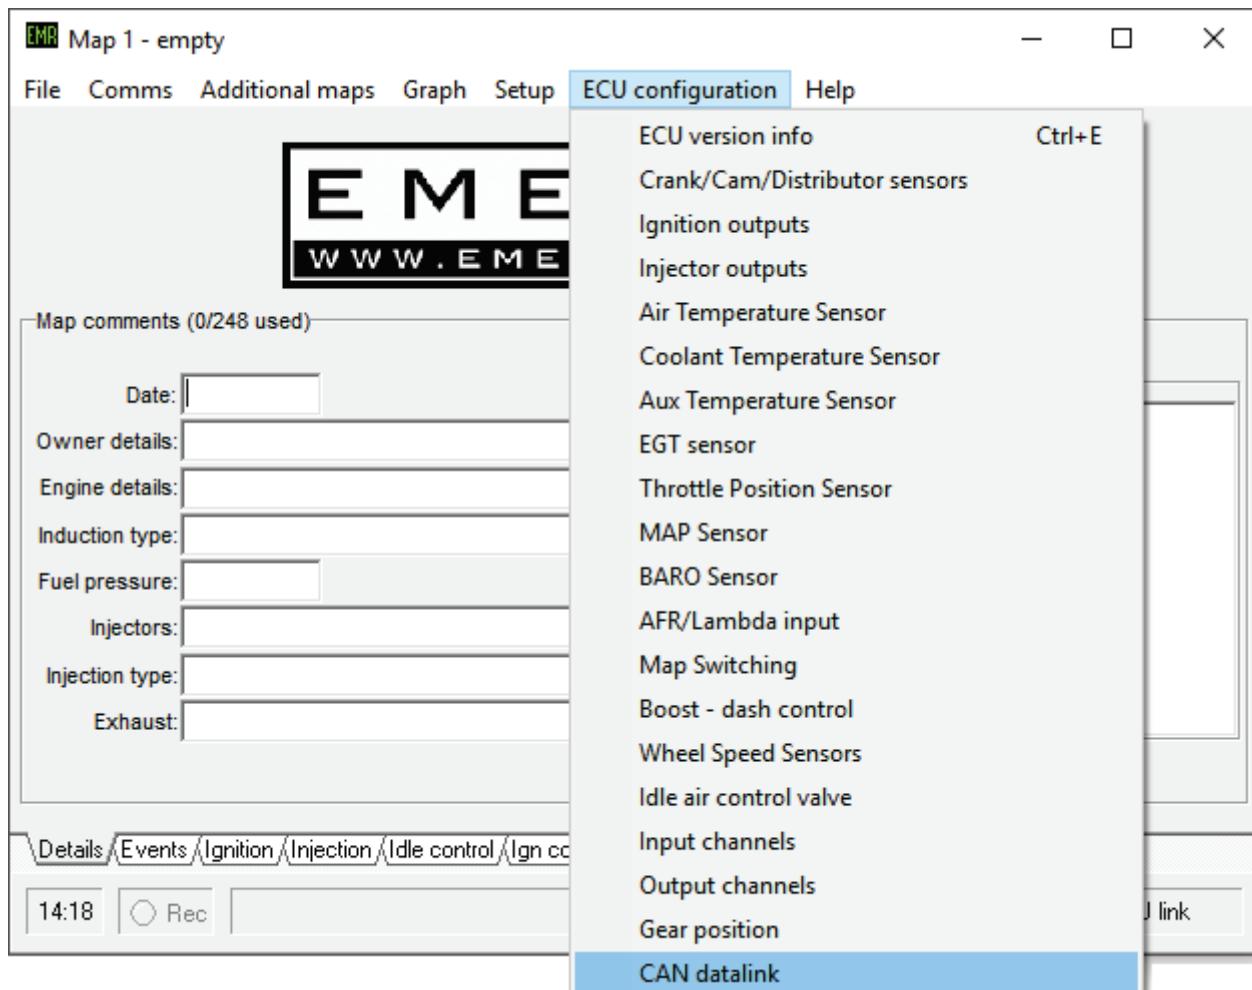

- "CAN datalink settings" panel appears: it is set as "Emerald/Generic" by default.

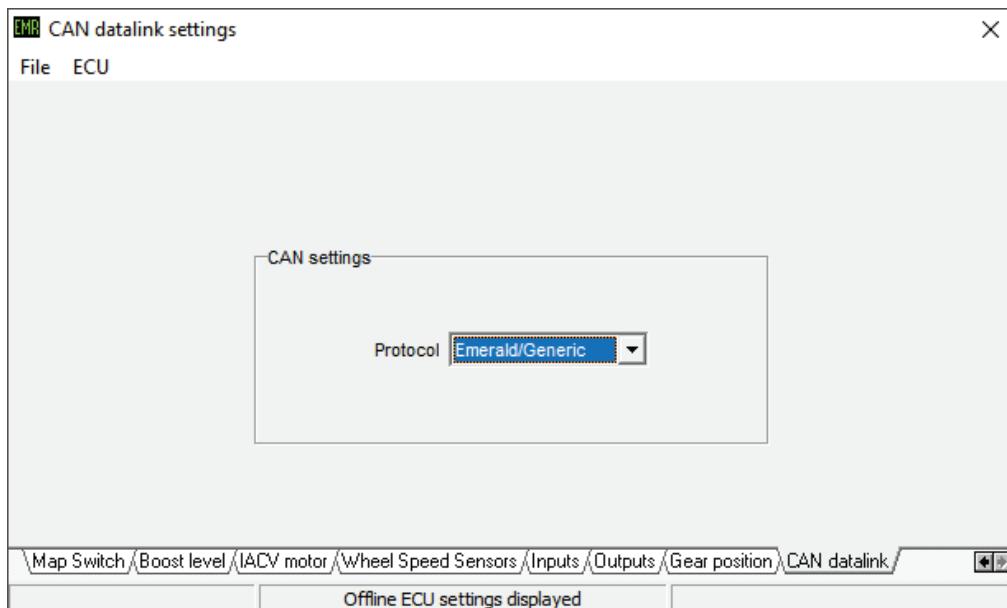


- follow the path "ECU → Update ECU configuration"

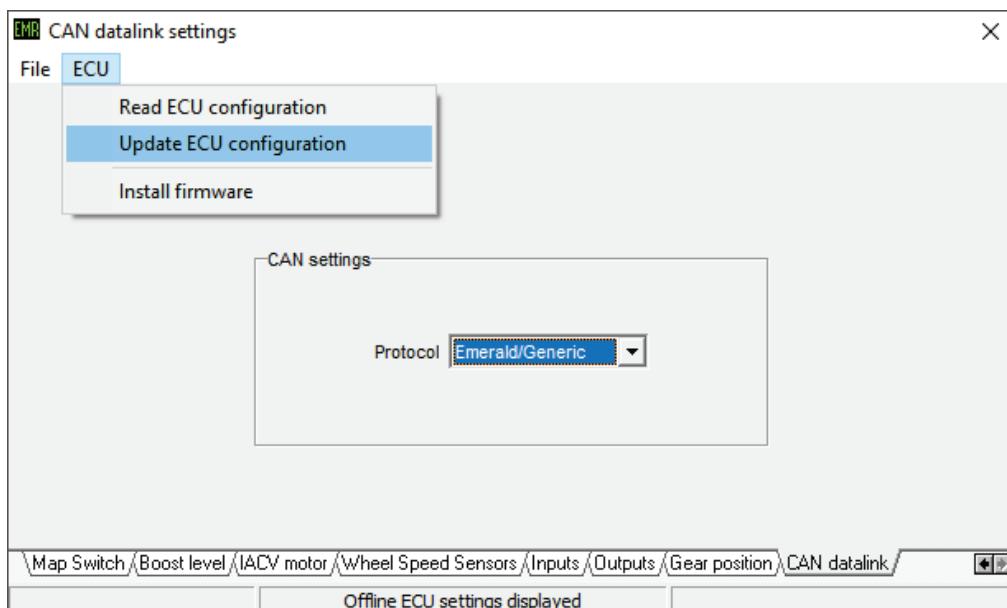

2

Wiring connection

Emerald K3/K6 ECU features a bus communication protocol based on CAN. Rear on the ECU are two DB9 connectors: AiM devices use the one on the left labelled "COMMS". Here below you see DB9 connector on the left, its pinout on the right and the connection table below.

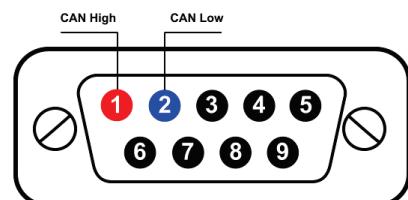**DB9 connector pin**

DB9 connector pin	Pin function	AiM cable
1	CAN High	CAN+
2	CAN Low	CAN-

Pin function**AiM cable**

Please note: Emerald K3/K6 ECUs come with a programming cable. The images here below show the cable plugged in on the left and an example of cable on the right.





3

Race Studio configuration

Before connecting the ECU to AiM device set this up using AiM Race Studio software. The parameters to select in the device configuration are:

- ECU Manufacturer: **EMERALD**
- ECU Model: **Generic CAN**

4

"EMERALD - Generic CAN" protocol

Channels received by AiM devices configured with "EMERALD - Generic CAN" protocol are:

CHANNEL NAME	FUNCTION
RPM	RPM
FUEL PRESSURE	Fuel pressure
OIL PRESSURE	Oil pressure
TRAGET LAMBDA	Lambda target
TARGET BOOST	Boost pressure
GEAR	Engaged gear
Road Speed	Vehicle speed
COOLANT TEMP	Engine coolant temperature
EGT	Exhaust gas temperature
AIR TEMP	Air temperature
AUX TEMP	Auxiliary temperature
MAP	Manifold air pressure
BARO	Barometric pressure
IGNITION ADV	Ignition advance
TPS	Throttle position sensor
INJECTOR DUR	Injector duration



CoilOnTime	Coil on time
Pri Inj BankOnTm	Primary injection banking (time)
Sec Inj BankOnTm	Secondary injection banking (time)
Battery	Battery voltage
AFR1	Air/Fuel ratio 1
AFR2	Air/Fuel ratio 2
StatusFlags	Status message
ErrorFlags	Error message
SELECTED MAP	Active engine map