

Wolf EC44 communication protocol

Channels received by AIM loggers connected to Wolf EC44 ECU are:

ID	CHANNEL NAME	FUNCTION
ECU_1	WOLF_RPM	RPM
ECU_2	WOLF_TPS	Throttle position sensor
ECU_3	WOLF_ECT	Engine cooling temperature
ECU_4	WOLF_IAT	Intake air temperature
ECU_5	WOLF_LOAD	Engine load
ECU_6	WOLF_MANIF_VAC	Manifold vacuum sensor
ECU_7	WOLF_TURBOP	Turbo pressure
ECU_8	WOLF_LAMBDA_VOLT	Lambda voltage
ECU_9	WOLF_INJT	Injection time
ECU_10	WOLF_INJ_DC	Injection DC
ECU_11	WOLF_IGNANG	Ignition angle
ECU_12	WOLF_IDLE_VALVE	Idle valve
ECU_13	WOLF_NOISE	Noise sensor
ECU_14	WOLF_BATT	Battery supply