

User Manual

LCU1S

Release 1.00





INDEX

1 – Introduction	3
2 – Available kits, optionals and spare parts	3
3 – Configuring LCU1S	4
4 – How to get the serial number of a connected LCU1S	8
5 – Online view and firmware update	10
6 – Technical specifications and drawings	13



1 – Introduction

LCU1S is the new smaller, lighter and faster AiM Lambda Controller expansion supported by all the last car-bike AiM devices.

Please note: the only systems that does not support LCU1S are MXL, MXL2 and MyChron.

LCU1S allows you to perfectly tune the carburation of the engine as well as to improve the engine performances.

LCU1S uses a Bosch LSU4.9 probe that saves the original calibration for the duration of the sensor life and lasts for more that 100.000 km on a stock car.

2 – Available kits, optionals and spare parts

Available LCU1S kits are:

LCU1S complete kit; part number:

X08LCU1SAC090

- LCU1S
- Bosch LSU 4.9 Lambda probe
- Thread iron ring for installation

LCU1S kit without Lambda probe; part number:

X08LCU1SAC0

- LCU1S

Optionals and spare parts:


- | | |
|-------------------------------------|------------------|
| • Bosch LSU 4.9 Lambda probe | X05LSU490 |
| • Thread iron ring for installation | LBS552680 |
| • 50cm AiM CAN cable | V02552690 |
| • 100cm AiM CAN cable | V02552700 |
| • 200cm AiM CAN cable | V02552720 |
| • 400cm AiM CAN cable | V02551070 |

3 – Configuring LCU1S

LCU1S can only be configured using AiM RaceStudio 3 software you can freely download from AiM website at www.aim-sportline.com download software/firmware area.

LCU1S is an expansion that is to be loaded on AiM device configuration so first of all run the software and select the configuration where to load LCUS1S on or create a new one as shown here below. To create a new configuration:

- Press “New Configuration” (1)
- Select the device you are configuring (Solo 2 DL v2 in the example below 2)
- Press “OK” (3)

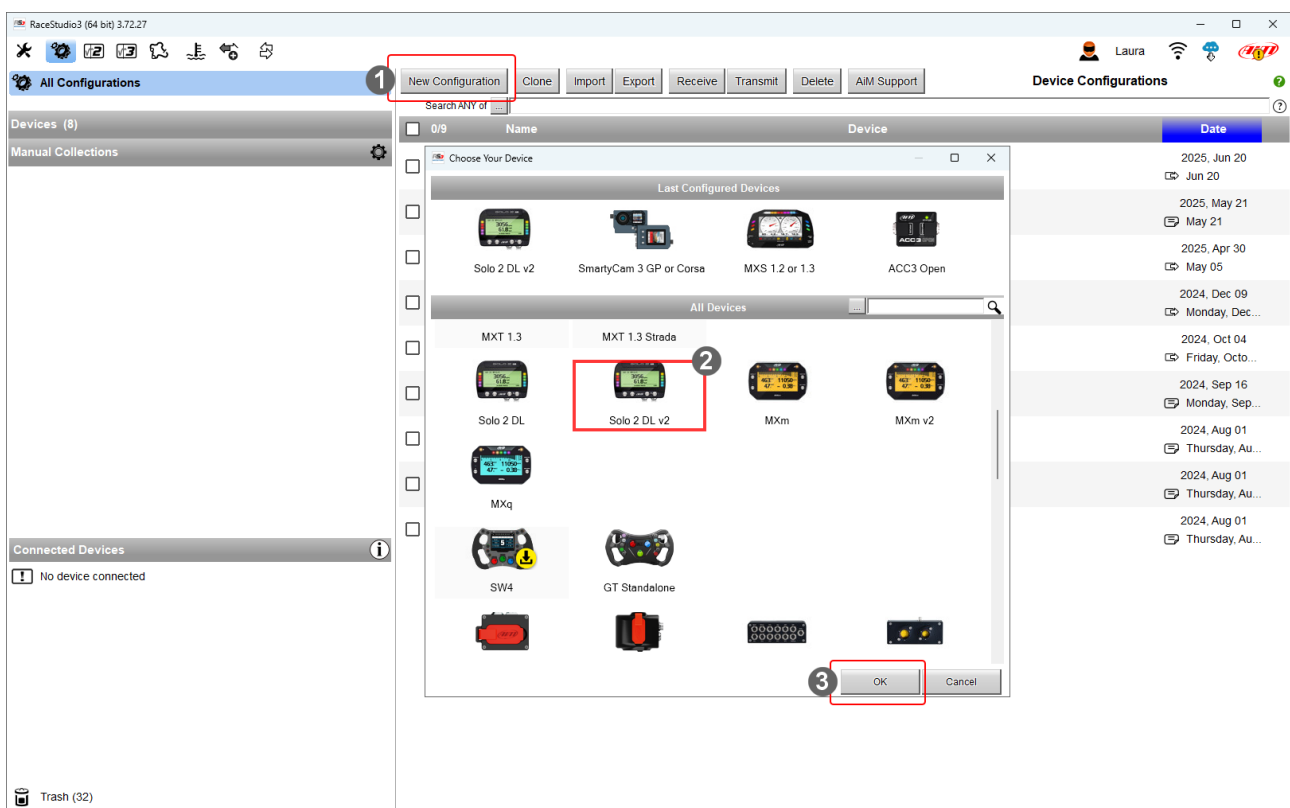



User Guide

The software enters “Channels” tab.

RaceStudio3 (64 bit) 3.72.27

Laura

All ConfigurationsSolo 2 DL v2

SaveSave AsCloseTransmit


total channels: 25 4%
total frequency: 1112 22%

ChannelsECU StreamCAN ExpansionsMath ChannelsParametersLED-BarsDisplaySmartyCam StreamCAN Output

ID	<input checked="" type="checkbox"/>	Name	Function	Sensor	Unit	Freq	Parameters
RPM	<input checked="" type="checkbox"/>	RPM	Engine RPM	RPM Sensor	rpm	20 Hz	max: 16000.000000 ; factor: /1 ;
Acc1	<input checked="" type="checkbox"/>	InlineAcc	Inline Acceleration	Internal Accelerometer	g 0.01	50 Hz	
Acc2	<input checked="" type="checkbox"/>	LateralAcc	Lateral Acceleration	Internal Accelerometer	g 0.01	50 Hz	
Acc3	<input checked="" type="checkbox"/>	VerticalAcc	Vertical Acceleration	Internal Accelerometer	g 0.01	50 Hz	
Gyr1	<input checked="" type="checkbox"/>	RollRate	Roll Rate	Internal Gyro	deg/s 0.1	50 Hz	
Gyr2	<input checked="" type="checkbox"/>	PitchRate	Pitch Rate	Internal Gyro	deg/s 0.1	50 Hz	
Gyr3	<input checked="" type="checkbox"/>	YawRate	Yaw Rate	Internal Gyro	deg/s 0.1	50 Hz	
PAccu	<input checked="" type="checkbox"/>	GPS PosAccuracy	AIM GPS Position Accuracy	GPS	ft	auto (accor...	
Spd	<input checked="" type="checkbox"/>	GPS Speed	GPS Speed	GPS	mph 0.1	auto (accor...	
Alt	<input checked="" type="checkbox"/>	Altitude	GPS Altitude	GPS	ft 0.01	auto (accor...	
POTCA	<input type="checkbox"/>	POTotCmtAll	Output Current	Internal Math Channel	A 0.1	10 Hz	

To load LCU1S activate “CAN Expansions” (1) tab as shown here below and follow these steps:

- Press “New Expansion” (2)
- Select LCU1S (3)
- Press “OK” (4)

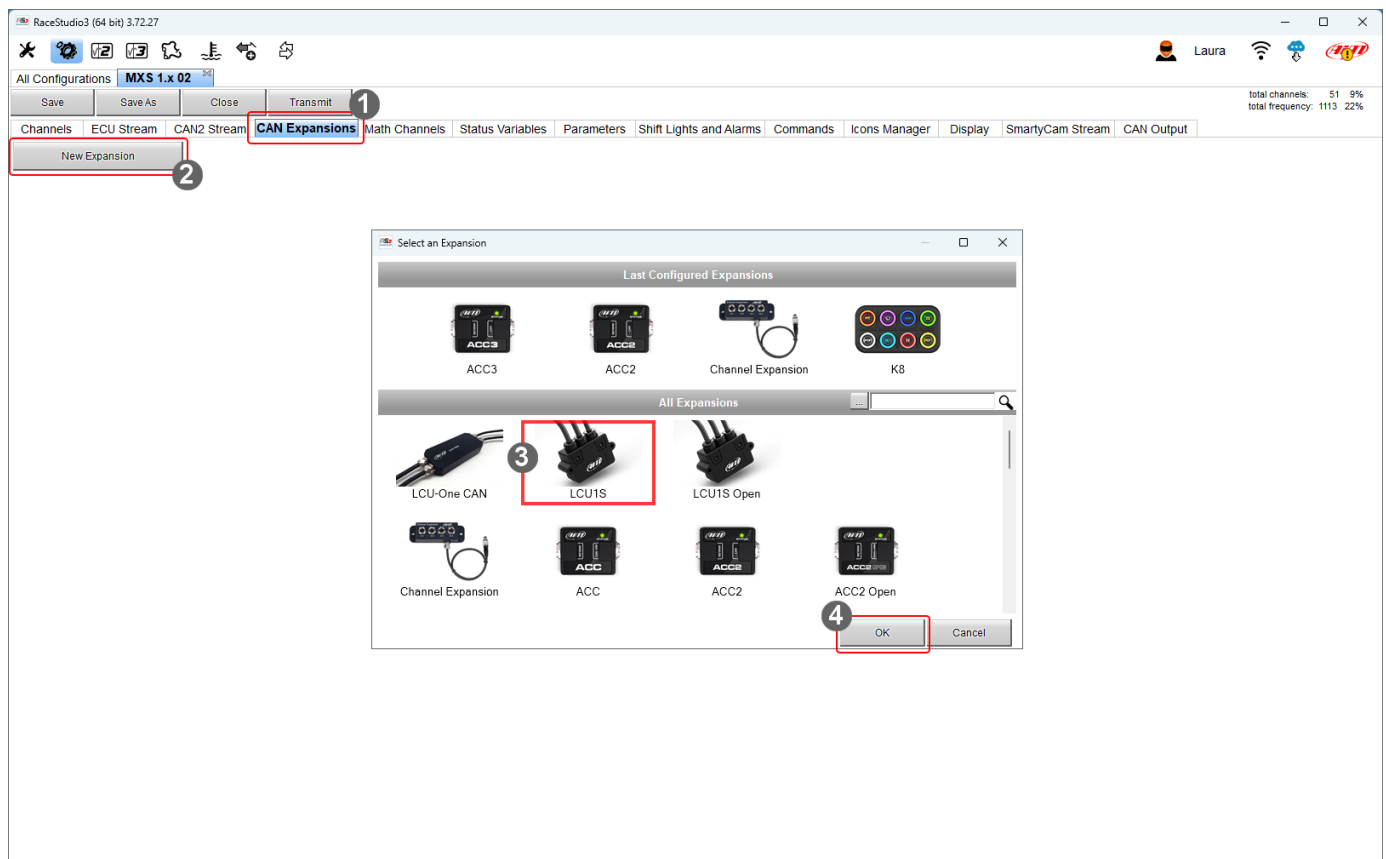

Once the expansion added, the software enters the related tab (0LC1S). Here it is possible to:

- Get the serial number of LCU1S or fill it in manually (1); **please note:** to get the serial number from the connected LCU1S it is necessary to power it and connect the master device LCU1S is connected to your PC via Wi-Fi (or via USB). Please refer to the user manual of each logger to know how to manage Wi-Fi connection;
- select the multiplier to calculate AFR from Lambda value
- manage custom values through the dedicated panel that is prompted clicking the proper button

As far as the channel table (2) is concerned, clicking on each channel it is possible to set sampling frequency, Unit of measure and display precision.

Expansion Name (6 Characters Max.) Get Expansion Serial Number **1**

Expansion Serial Number (S.N.)

Multiplier to calculate AFR (AFR) from lambda (AFR = Air Fuel Ratio = pounds of air / pound of fuel)

14.57 - Gasoline Manage Custom Values

6.40 - Methanol
9.00 - Ethanol
14.57 - Gasoline
14.60 - Diesel
15.50 - LPG (Propane)
17.20 - CNG

Lambda Multiplier Manager

Lambda Multiplier Values	Value	Label
6.40 - Methanol	14.57	Gasoline
9.00 - Ethanol		
14.57 - Gasoline		
14.60 - Diesel		
15.50 - LPG (Propane)		
17.20 - CNG		

Change value above and click here to add it
Remove Current Item
Restore Default Values

OK Cancel


ID	<input checked="" type="checkbox"/>	Name	Function	Sensor	Unit	Freq	Parameters
Lmd	<input checked="" type="checkbox"/>	0LC1S Lambda	Lambda	Lambda	# 0.01	10 Hz	
AFR	<input checked="" type="checkbox"/>	0LC1S AFR	AFR	AFR	# 0.01	10 Hz	
Ltm	<input checked="" type="checkbox"/>	0LC1S LmdTmp	Lambda Temperature	LmdTmp	# 0.1	10 Hz	
LDg	<input checked="" type="checkbox"/>	0LC1S Diagn	Lambda Diagnosis	LCU-One Diagn	#	1 Hz	

2


4 – How to get the serial number of a connected LCU1S

To get the serial number of the connected LCU1S ensure that LCU1S is powered and connect the master logger to the PC. To do so:

- click the Wi-Fi icon top right of the software view (or plug the USB cable of the logger in the PC USB port)
- Select the logger to connect via Wi-Fi and press “Connect”.

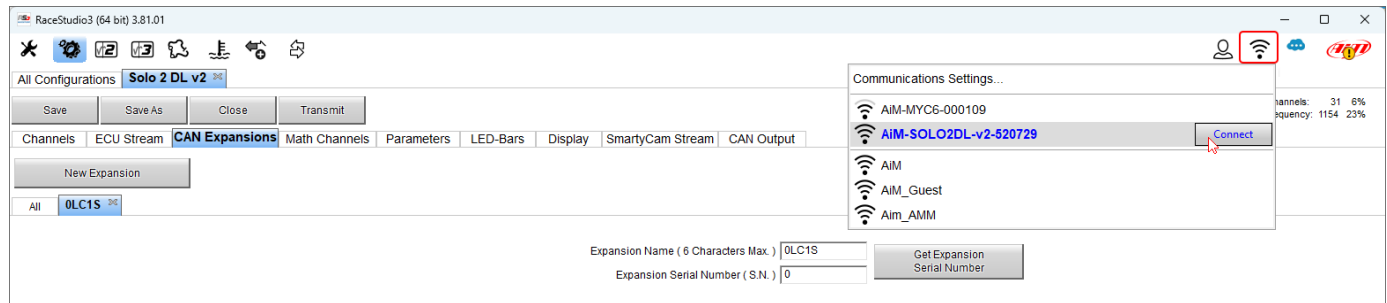

- Once the logger connected press “Get Expansion Serial Number” as shown here below
- A panel is prompted: select the connected expansion to configure and press “OK”

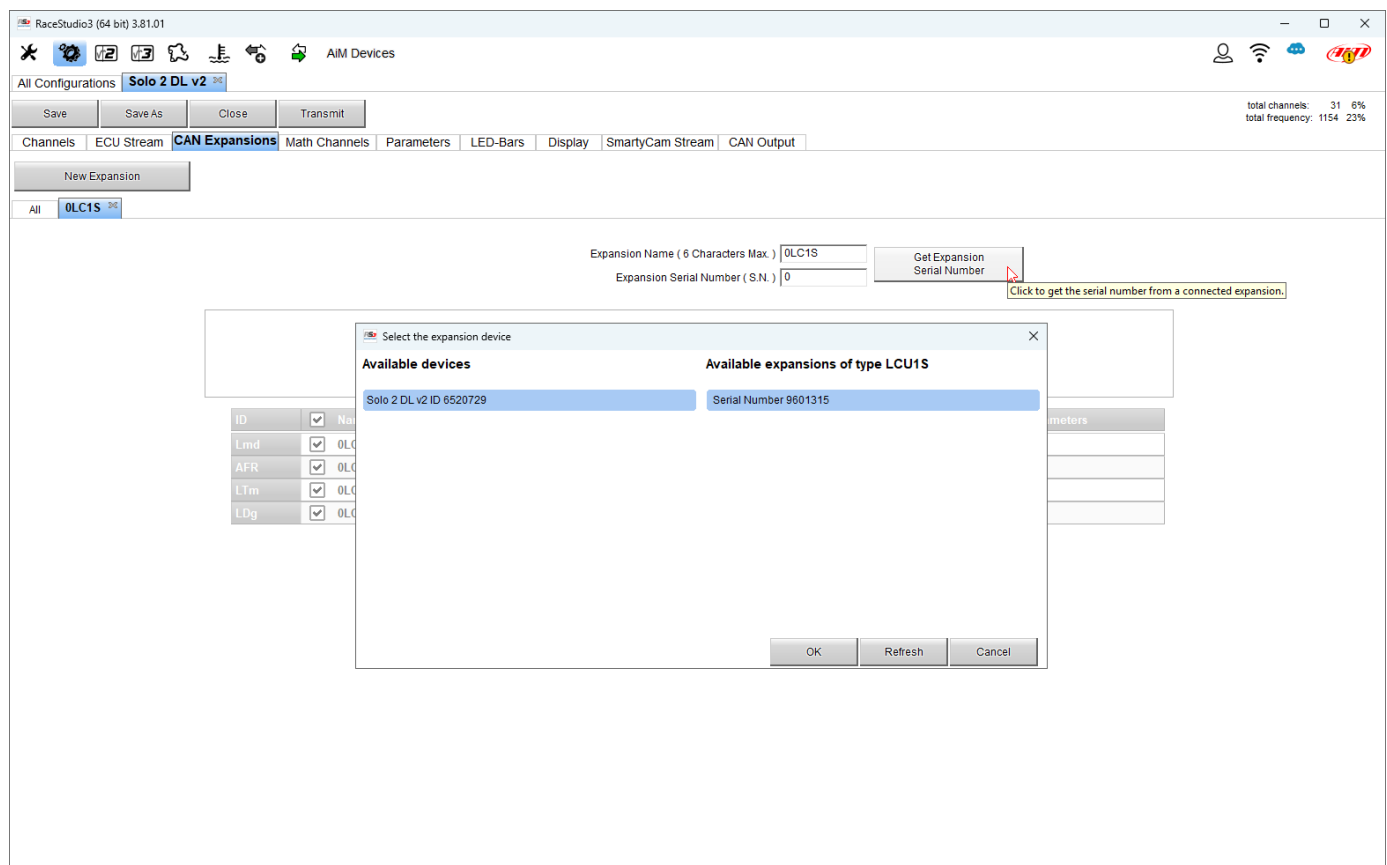



- the software comes back to “CAN Expansions” tab and shows LCU1S Serial number.

RaceStudio3 (64 bit) 3.81.01

All Configurations **Solo 2 DL v2**

Save Save As Close Transmit

Channels ECU Stream **CAN Expansions** Math Channels Parameters LED-Bars Display SmartyCam Stream CAN Output

New Expansion

All **0LC1S**

Expansion Name (6 Characters Max.) 0LC1S Get Expansion Serial Number

Expansion Serial Number (S.N.) 9601315

Multiplier to calculate AFR (AF) from lambda (AFR = Air Fuel Ratio = pounds of air / pound of fuel)

14.57 - Gasoline Manage Custom Values

ID	<input checked="" type="checkbox"/>	Name	Function	Sensor	Unit	Freq	Parameters
Lmd	<input checked="" type="checkbox"/>	0LC1S Lambda	Lambda	Lambda	# 0.01	10 Hz	
AFR	<input checked="" type="checkbox"/>	0LC1S AFR	AFR	AFR	# 0.01	10 Hz	
Ltm	<input checked="" type="checkbox"/>	0LC1S LmdTmp	Lambda Temperature	LmdTmp	# 0.1	10 Hz	
LDg	<input checked="" type="checkbox"/>	0LC1S Diagn	Lambda Diagnosis	LCU-One Diagn	#	1 Hz	



5 – Online view and firmware update

Once LCU1S connected and identified it is suggested to complete, save and transmit the configuration to the logger. This procedure changes according to the logger that is being configured.

Now it is possible to enter online view and check LCU1S values. To do so:

- enter “Configurations” view
- Press the logger you are configuring as shown here below.


The screenshot shows the RaceStudio3 (64 bit) 3.81.01 interface. The 'All Configurations' tab is active, showing a list of configurations. The 'Connected Devices' section on the left lists 'Solo 2 DL v2 ID 6520729' with a red box around it. The main table displays a list of configurations with columns for Name, Device, and Date.

Name	Device	Date
Solo 2 DL v2	Solo 2 DL v2	11:14 AM
MXS 1.x 01	MXS 1.2 or 1.3	2025, May 21
XLog	XLog	2025, Apr 30
MXS 1.x	MXS 1.2 or 1.3	2024, Dec 09
PDM32	PDM32	2024, Oct 04
K8 Open	K8 Open	2024, Sep 16
SmartyCam 3 Sport	SmartyCam 3 Sport	2024, Aug 01
SmartyCam 3 Dual	SmartyCam 3 Dual	2024, Aug 01
SmartyCam 3 GP or Corsa	SmartyCam 3 GP or Corsa	2024, Aug 01



The software enters Online view:

- Activate “Firmware” tab
- The view shows the logger and its expansions on the right part of the view as shown below.

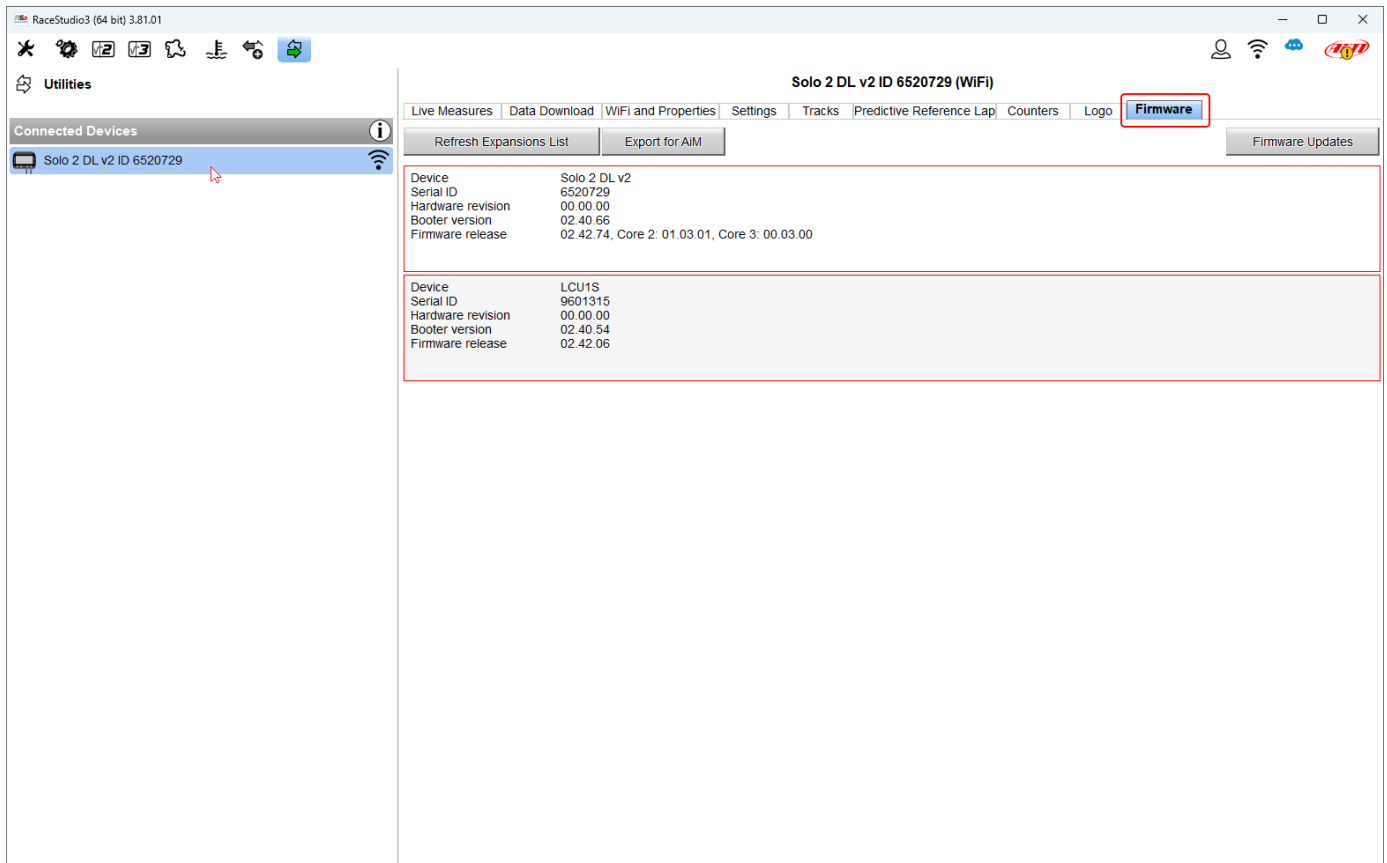





User Guide

To update both logger and expansions firmware:

- click the related button top right of the view

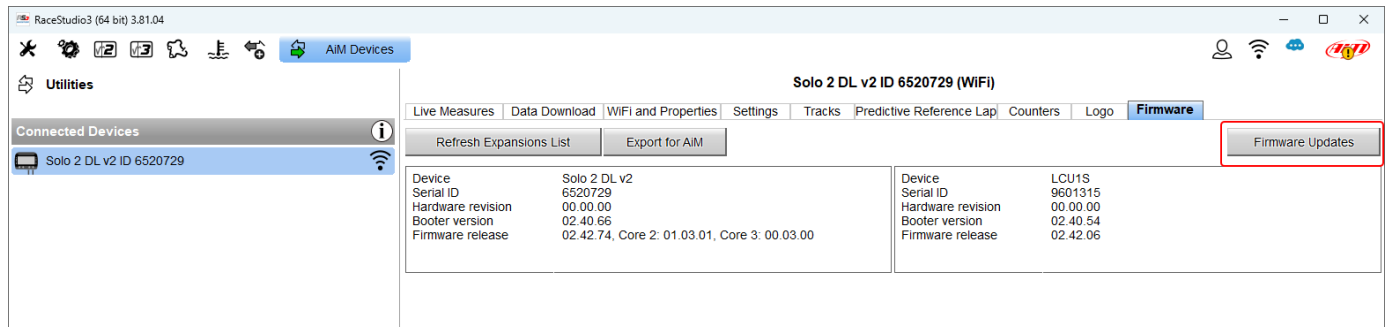

- the software enters firmware update view where it is possible to download and install the firmware as for any AiM device.

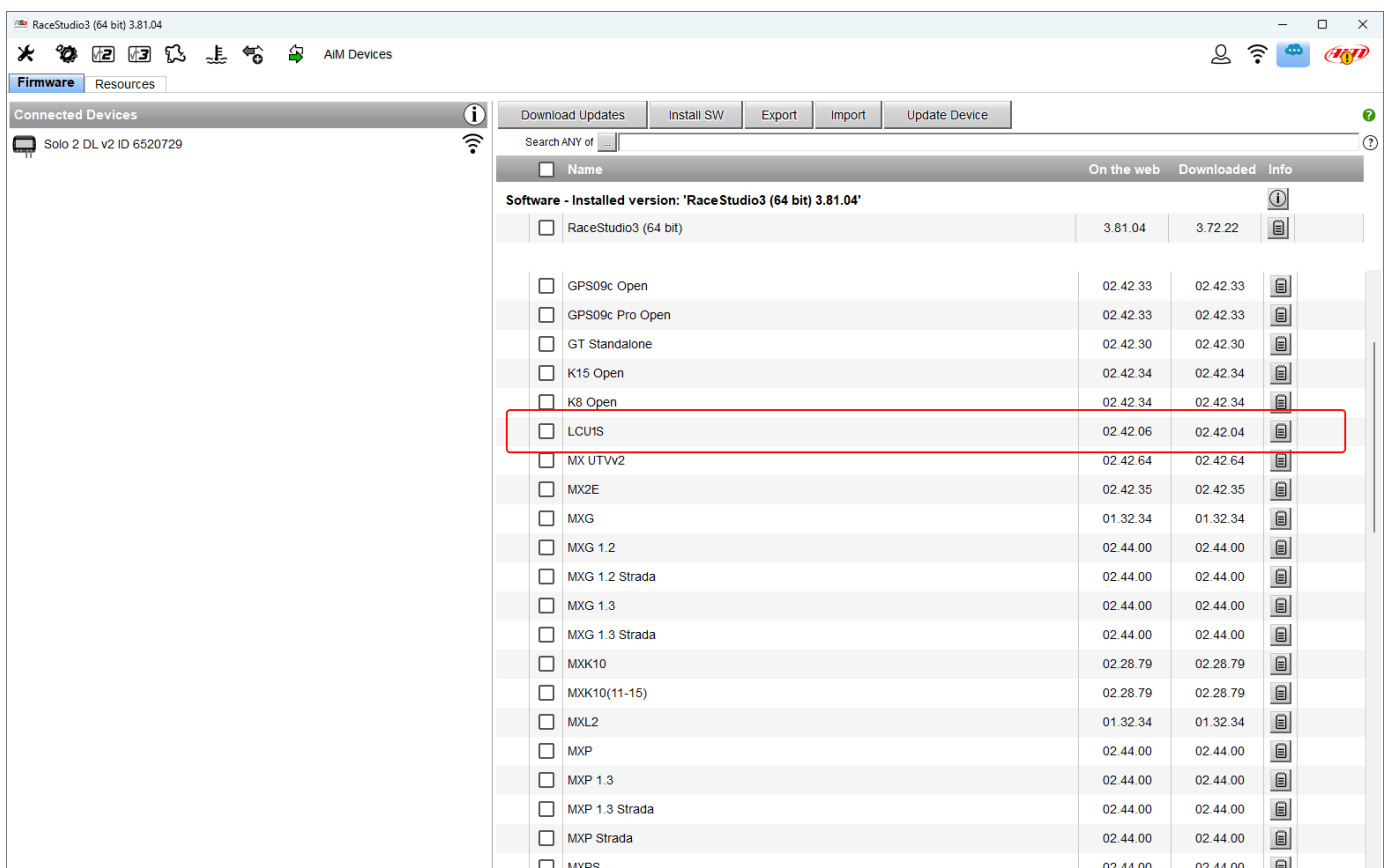




6 – Technical specifications and drawings

LCU1S technical specifications are:

- | | |
|------------------------|---|
| • Sensor compatibility | Bosch LSU4. |
| • Power supply voltage | 9-15V |
| • Power supply current | 50mA ÷ sensor heater typical current 750 mA up to 2A on cold sensor |
| • Reaction time | Less than 10msec |
| • Material | Latigloss 57 |
| • Dimensions | 43.4x30x18.4 mm |
| • Weight | 70g |
| • Waterproof | IP67 |

LCU1S Dimensions in mm [inches]

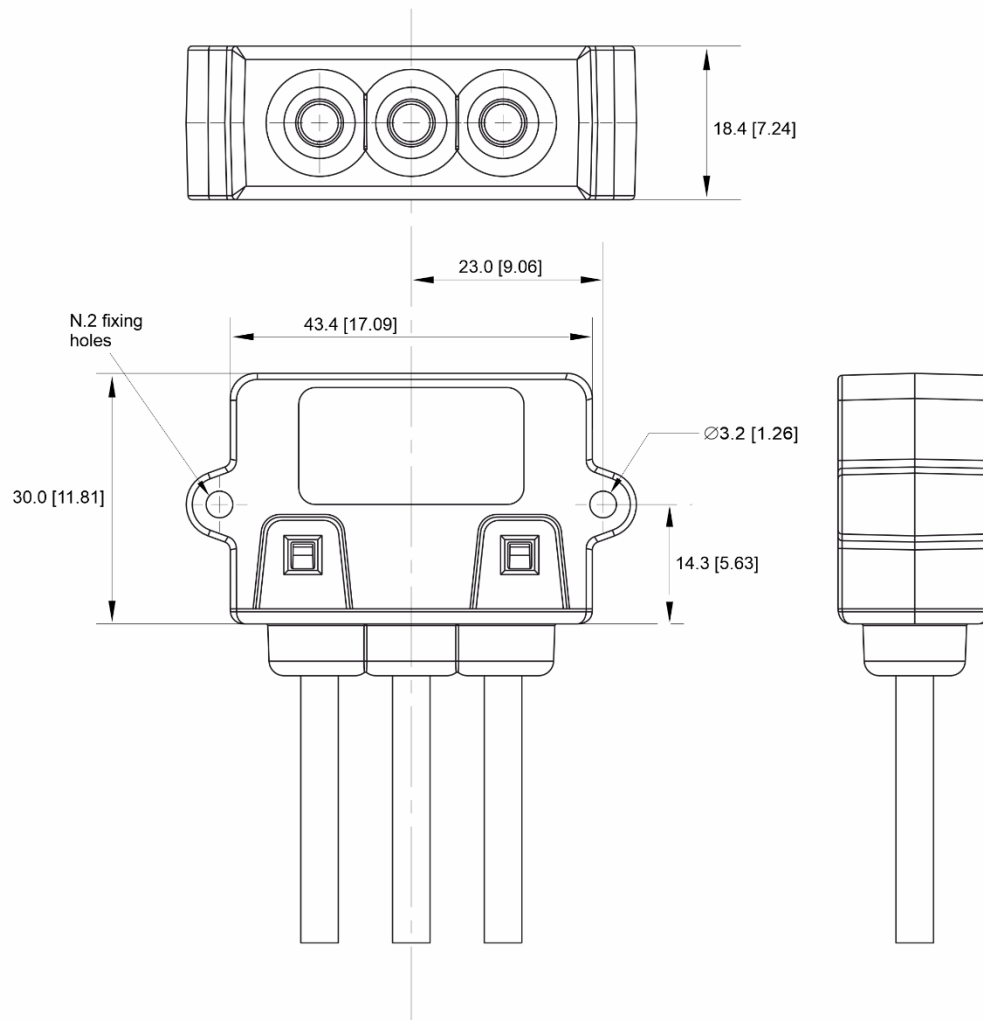

LCU1S Pinout

